


Initial start-up of the sector control

After [mounting](#) it is important to configure the sector control for the first time.

Read the Zero Position From the Sector Control

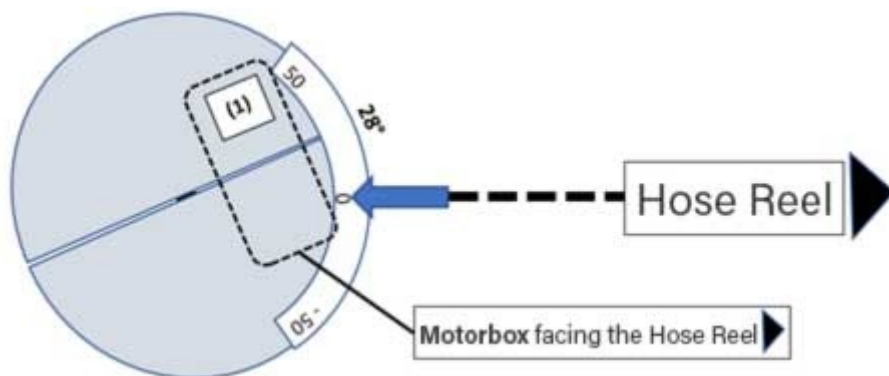

Zero Position: Please hold (or stick) the included sticker with the angle indication in a way that the zero mark points towards the hose reel. Now you can read off the zero offset at the groove between the cover plates (**here 28°**). Please take care to note if + or - (+28° or -28° for example).

For irrigators with a lever located at the rear (e.g. **Nelson**), please add 180 degrees to this value.

Please enter the zero position offset into the app ([see below](#)).

Settings in the Raindancer App

09:09
•
📶
🔋 92 %



 Grundeinstellungen

 Druck & Durchflussmenge

 Auto Speed

 Sektorverstellung

Standardsektor
für Automatik-Modus


- -135 +
- 135 +

Wurfweite
Einheit: m
- 0 +

Erw. Einstellungen
▼

Berechnung vor Trommel
am Einsatzende Vollkreisberechnung
☒ OFF

Entfernung zum Ziel
Einheit: m
- 60.0 +

Sektor für Endberechnung
Einheit: Grad
- 360 +

Max. Fläche berechnen
verhindert unberechnete Ecken bei Hindernissen
☒ ON

Nullposition
Grad (± 180°)
- 0 +

Min. Sektor
Einheit: Grad
- 30 +

Regnerüberhang
Grad (± 180°)
- 0 +

Sektorverstellung
☒ ON

 Energieeinstellung

Schließen

Click on the irrigator and go to the buttons **"More"** -> **"Settings"** -> **"Sector Adjustment"**, here you must "activate" (ON) the Sector Adjustment.

With "Save and Apply Settings" your settings will be stored, and you will find more options in this section.

Now you can enter the basic settings.

Default sector: Here you enter the angle at which you wish to irrigate by default. (e.g. -135 / 135, if you water at an angle of 270°). The orientation of the schematic image is corresponding to the point of view that you have when you look from the hose reel towards the gun!

Please take care to note if + or -

Throwing Width: Raindancer uses the throwing range for calculating the correct angle of the stops.

Irrigation in Front of the Reel: For example, if you irrigate at 270°, you can set it to automatically switch to full-circle irrigation **60 m** in front of the reel, to distribute water at this place as well.

Irrigate Max. Area: Should be set to "ON" - it will enable the Sector Control to irrigate into the corners in case of an obstacle.

Zero Position:

See above. **Please take care to note if + or -**

You enter this value only once after installation!

See further information for [Overhang](#)

Revision #10

Created 4 March 2024 12:18:29 by Jens Götze

Updated 30 April 2024 17:18:01 by Jens Götze