

Manual Sector Control

Basically, you have two operating modes with the sector control:

- **AUTO:ON** → You let Raindancer calculate and automatically set the stop angles
- **AUTO:OFF** → You switch off the automatic system and set the stop angles yourself

To set **Auto:On/Off**, go to the **irrigator**, then to the **Sector Area**.

Here you will find the "**AUTO**" switch for switching over.

You normally work in automatic mode (**AUTO:ON**).

The stops are calculated by the raindancer and set automatically.

Manual Adjustments



If you want to **set the stop angles manually** on the smartphone, switch to **AUTO:OFF**


You will now be asked whether you want to switch ...

- **Permanently** - i.e. until you later say yourself: now it should "automatically set the sector" again
- **Until the end of the operation** - i.e. only for this gear
- **For a period of time** (e.g. 120 min) - i.e. for a limited time, after which it will switch back to automatic sector control.

When could this be done?

e.g. if a stop is to be set to 50° for 2 hours when the wind is blowing in the evening.

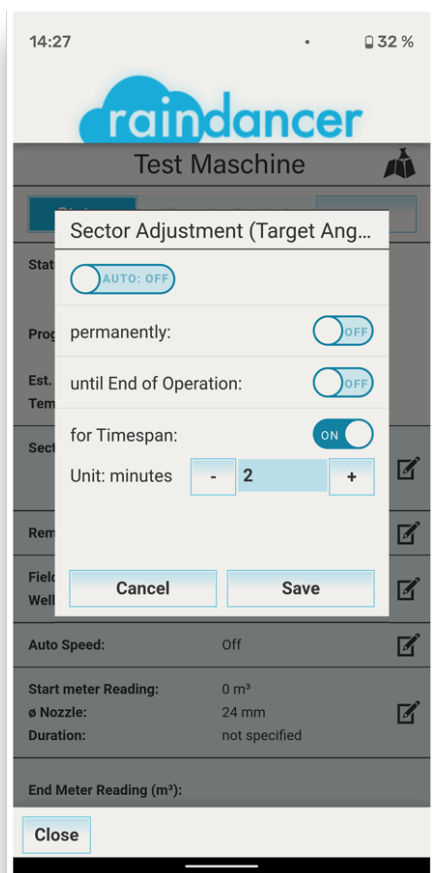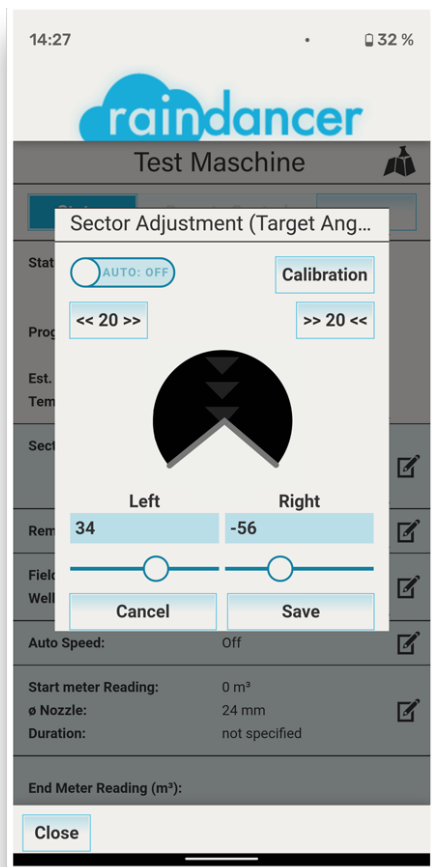

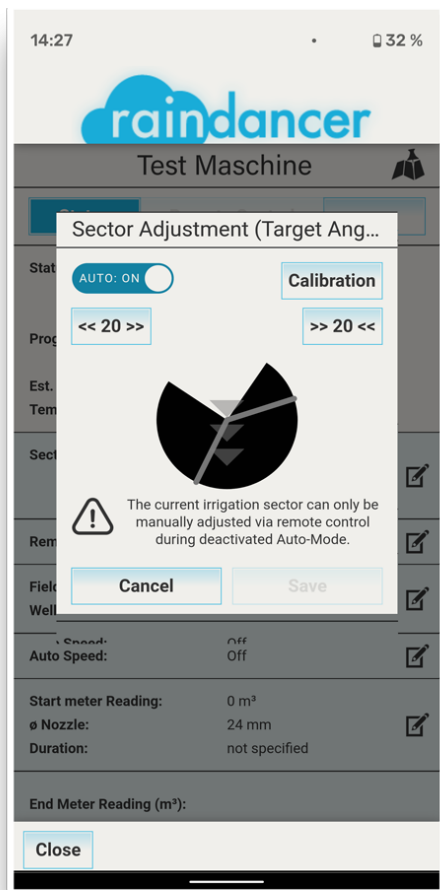

The connection to the raindancer is usually only established **every 7 minutes!**
The correction of the stops is therefore not immediate.

Revision #5

Created 4 March 2024 15:10:30 by Jens Götze

Updated 30 April 2024 17:18:29 by Jens Götze