


Overhang

Click on the irrigator and go to the buttons **More** → **Settings** → **Sector Adjustment** → **Ext. Settings**

Measurement

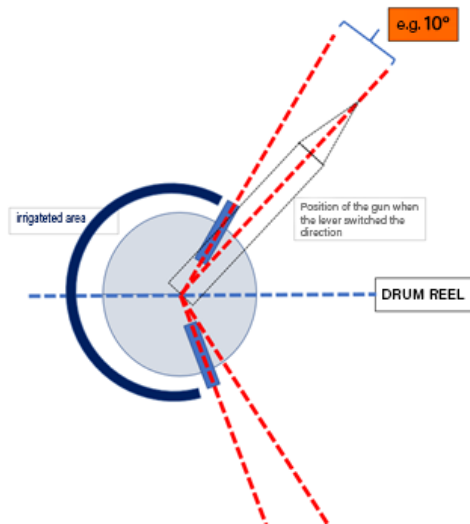

Sometimes the point to which the stop is set does not correspond exactly to the point at which the gun changes the direction of the pan.

To account for this variance, you can measure the gun overhang (see diagram) and then store it for the irrigator in the app.

| | | | |
|-----------------------------|---|---|---|
| Irrigator Overhang | - | 0 | + |
| Degrees ($\pm 180^\circ$) | | | |

Revision #3

Created 4 March 2024 12:30:57 by Jens Götze

Updated 26 April 2024 17:50:07 by Jens Götze