

# Setup Hüdig Control

The following settings must be made for Hüdig Controls.

1. Activation of the GSM/SMS control
  - Save the SMS connection
  - Setup on the portal

## Activation of the SMS control on the hose reel

A SIM card must be inserted into the machine and a configuration made on the Huedig Control. Detailed instructions can be found in [Huedig Control complete \(DE\)](#) on page. 25

## Setting up SMS control via Text Message

Once the SIM card has been inserted and activated, control text messages can be sent to the computer.

Setting the Event Query

There is a defined pattern for this:

T 01 (Slot bis 19), Server Number (003197014444993), 9(all Events) Name

### Beispiel:

T 01,003197014444993,9 RD

## Setting the name of the irrigation machine in answers for easier assignment

There is a definite scheme for this:

T 20 (Slot for Name), Server Number (003197014444993), Name of Irrigator

### Beispiel:

T 20,003197014444993,Irrigator 4

## Checking the entered data

As soon as all settings have been made, queries can be sent to the Hüdig controller to check the respective memory data registers.

R + Number of Register

R 01

**Irrigator 4:**

T 01,003197014444993,9 RD

## Further settings

For further settings there is the [Instructions for SMS control from Hüdig](#)

---

Revision #4

Created 27 March 2024 14:58:46 by Jens Götze

Updated 30 April 2024 16:39:22 by Jens Götze