


Setup Sector Control with a boom on a Fasterholt

To activate the Boomswitch in the Raindancer App, you need to go to extended settings and activate output channel two.

In default these settings are disabled. so you need to disable default checkbox and activate the features.

1. **has expansion ouput:** active
2. **Output-Expansion Used Channels:** Just output 2
3. **Output-Expansion Channel 2 Label:** Boom (or similar (just the label)

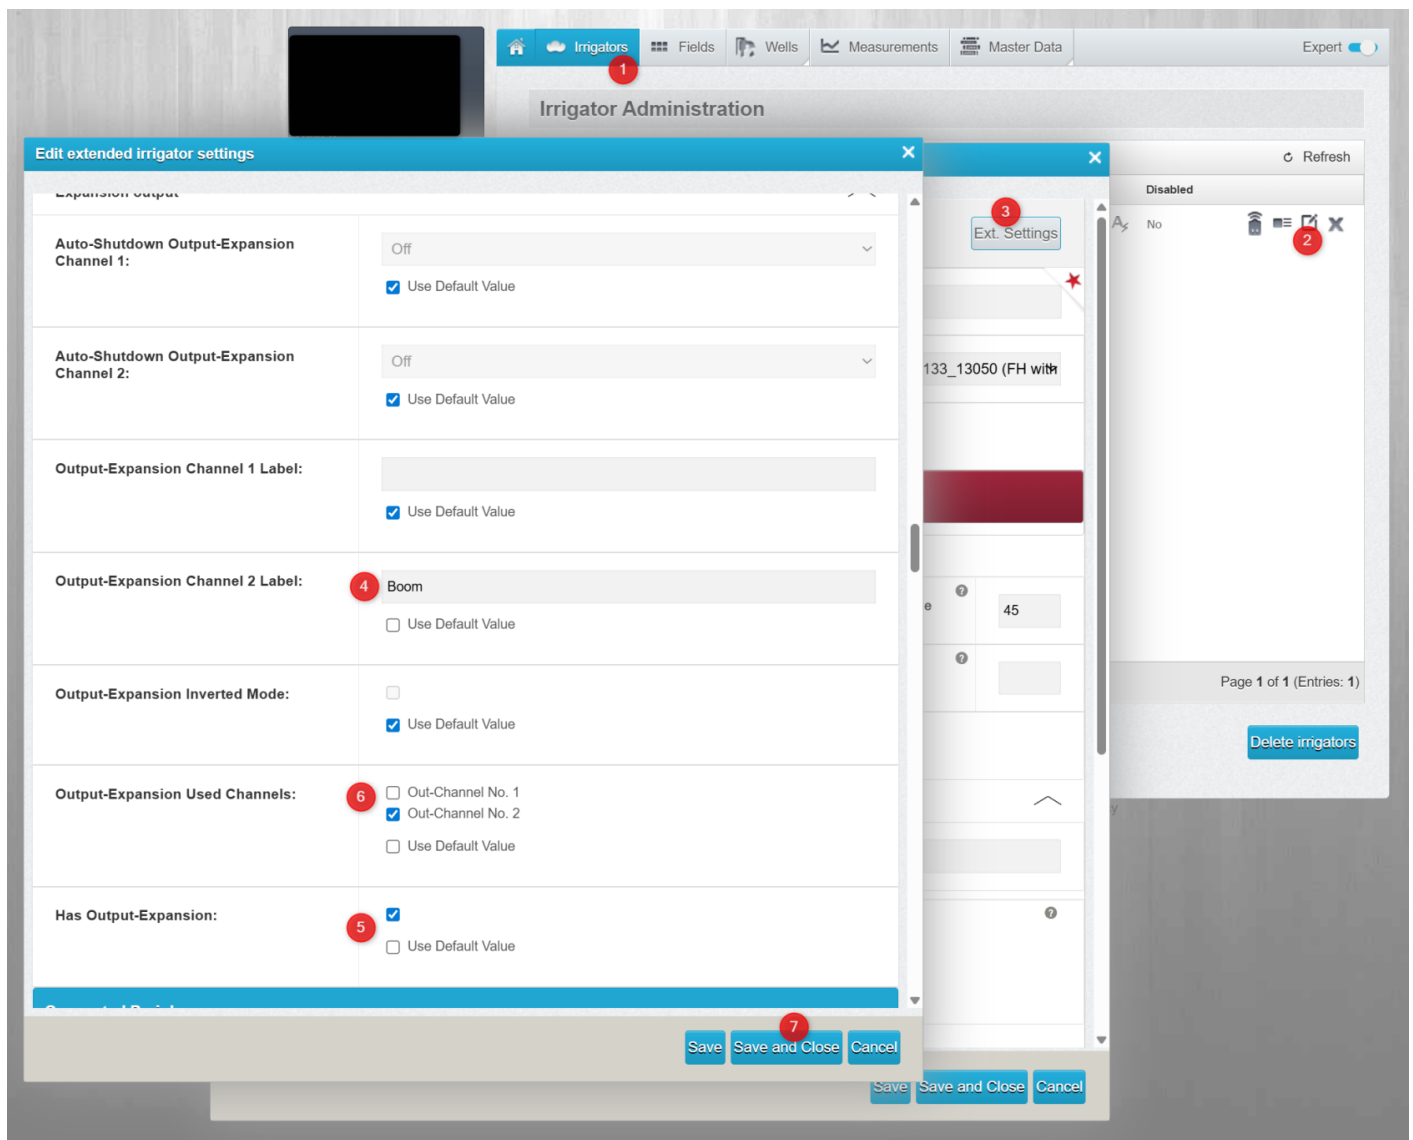

After activating the input, the Output switch will be visible in control mask.



FH with Boom



● No mission

🕒 12:06 PM 📶 100% 🔋

The remote control (Nortoft PR10-12 (IP)) is offline.

📶 The remote control (Nortoft PR10-12 (IP)) is offline.

DUFOUR - MISE EN ROUTE (-)

■
mm■
m/h0
bar■
m³/h

🔙 Sector Adjustment

Manual

0 0

current range: 45 m

🔙 Parameter

ø Nozzle:
27 mm

Throwing Range: 45m

🔄 Auto Speed

OFF

📶 Remote

Nortoft PR10-12 (IP)

OFFLINE

17°C • Version: 2.9.8, P35, M01.24_A01.10 • 35_30_0133_13050 ⓘ

📝 Remarks

⚙ More Settings

Field: DUFOUR - MISE EN ROUTE**Run:** - not available -**Well:** - indéterminé -**Duration:** not specified

DESTINATION



PREPARE

Boom



OFF

Pending Messages



Revision #2

Created 9 June 2026 11:15:52 by Frank Dühnelt

Updated 9 June 2026 12:10:52 by Frank Dühnelt