Manual Sector Control

Basically, you have two operating modes with the sector control:

- **AUTO:ON** → You let Raindancer calculate and automatically set the stop angles
- **AUTO:OFF** → You switch off the automatic system and set the stop angles yourself

To set **Auto:On/Off**, go to the **irrigator**, then to the **Sector Area**.
Here you will find the "**AUTO**" switch for switching over.

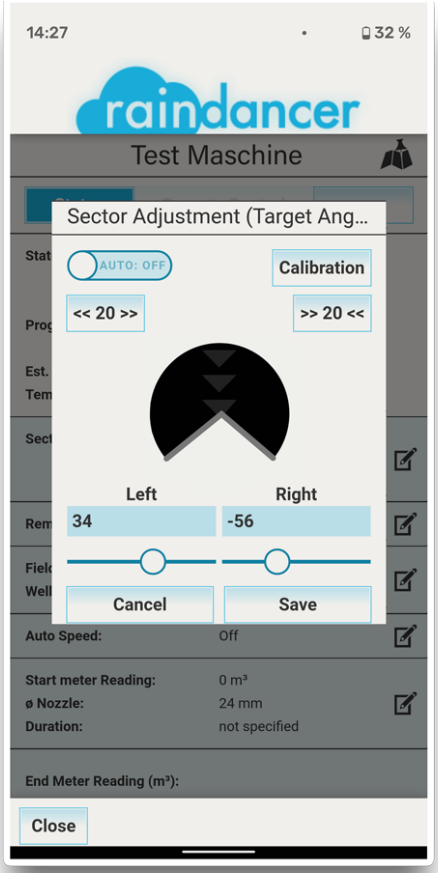
You normally work in automatic mode (**AUTO:ON**).
The stops are calculated by the raindancer and set automatically.

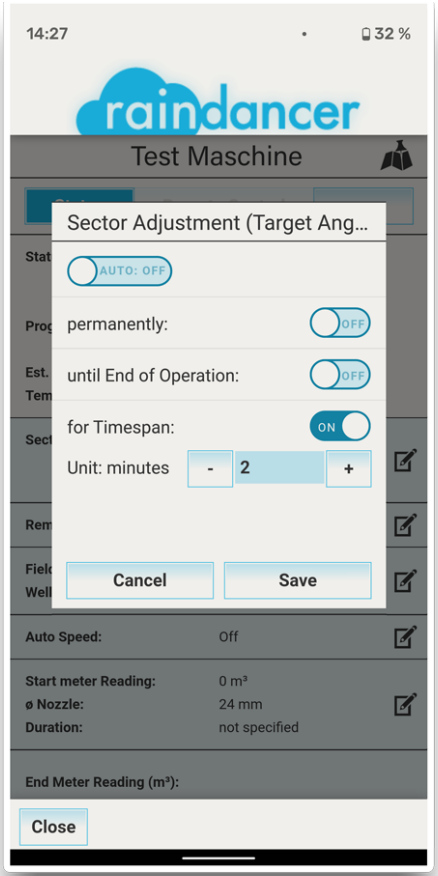
Manual Adjustments

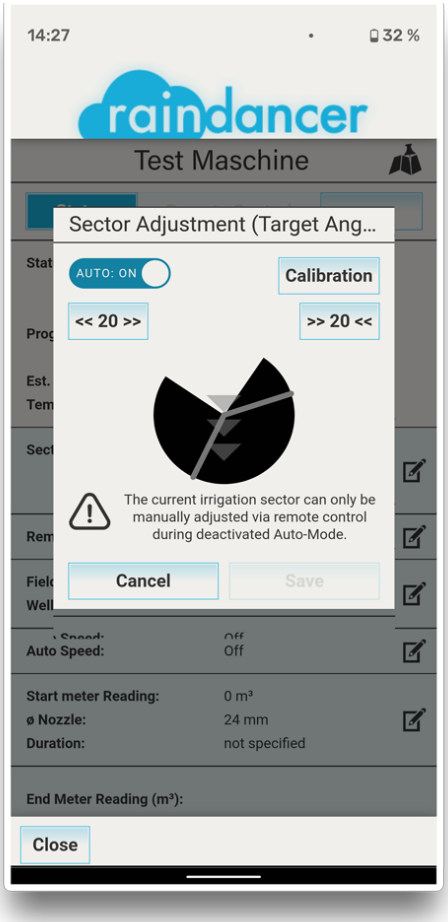
If you want to **set the stop angles manually** on the smartphone, switch to **AUTO:OFF**

You will now be asked whether you want to switch ...

- **Permanently** - i.e. until you later say yourself: now it should "automatically set the sector" again
- **Until the end of the operation** - i.e. only for this gear
- **For a period of time** (e.g. 120 min) - i.e. for a limited time, after which it will switch back to automatic sector control.
  When could this be done?
  e.g. if a stop is to be set to 50° for 2 hours when the wind is blowing in the evening.


14:27
32 %
raindancer
Test Maschine
Sector Adjustment (Target Ang...
AUTO: OFF
Calibration
<< 20 >>
>> 20 <<
Left
Right
34
-56
Cancel
Save
Auto Speed:
Off
Start meter Reading:
0 m³
ø Nozzle:
24 mm
Duration:
not specified
End Meter Reading (m³):
Close


14:27
32 %
raindancer
Test Maschine
Sector Adjustment (Target Ang...
AUTO: OFF
permanently:
OFF
until End of Operation:
OFF
for Timespan:
ON
Unit: minutes
-
2
+
Cancel
Save
Auto Speed:
Off
Start meter Reading:
0 m³
ø Nozzle:
24 mm
Duration:
not specified
End Meter Reading (m³):
Close



> The connection to the raindancer is usually only established **every 7 minutes**!
> The correction of the stops is therefore not immediate.

Revision #5
Created 4 March 2024 15:10:30 by Jens Götze
Updated 30 April 2024 17:18:29 by Jens Götze