Setup Notifications

To have employees notified, follow these steps.


How to set notifications

1. On the raindancer portal, select **Config** on the left-hand side, then **User**
2. Click on the **Configure Notifications** button at the bottom of the user overview
3. Tick the box next to the employee ✓, to indicate that the selected employee will receive a notification for these events. ⊘ Icons, on the other hand, deactivate these notifications. Clicking on the icons changes the mode.

> You also have this option in the Raindancer app. To do this, click on **more** in the lower menu bar and select **Notification Settings.**

Explanation of the Events:

- **Event Areas:**
  Event areas are zones that have been drawn by you within your field to, amongst other things it can trigger a notification when the raindancer enters or leaves this zone.
- **Destination reached:**
  A notification will be sent shortly before the irrigation run is completed.
  The standard setting is set to 25 meters before the target point / hose reel. This value can be adjusted in the settings.
- **Operation Completed:**
  The irrigator has reached the target radius and a drop in pressure is detected.
- **Error:**
  This kind of events require immediate intervention. Examples of a malfunction could be a tipped over gun carriage or a too high water pressure.
- **Warning:**
  Warning messages are notifications that interfere with, but do not catastrophically hinder, operation. An example of a warning message would be a low pressure value at the sprinkler.

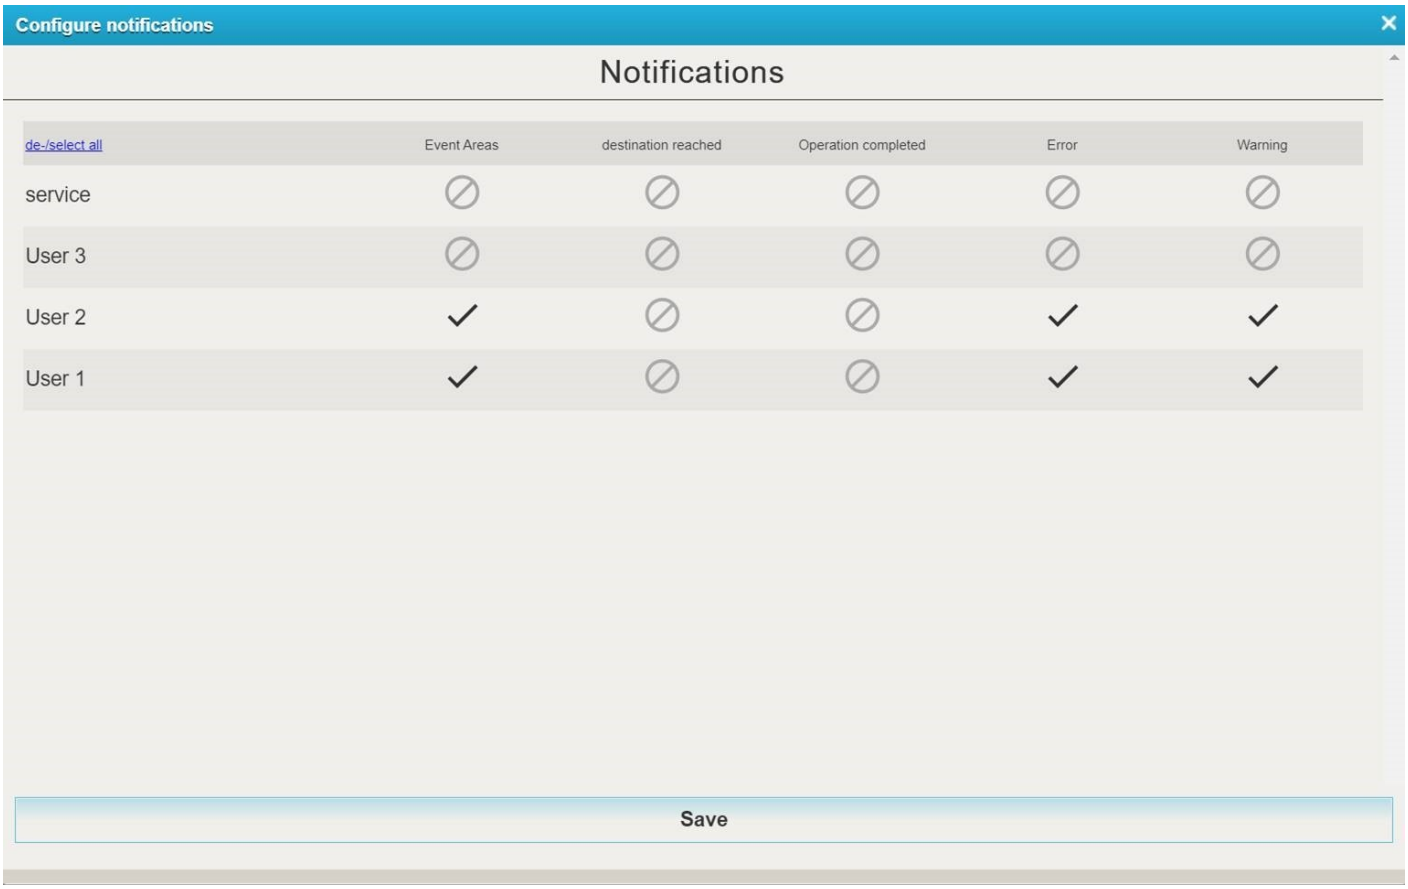

Revision #6
Created 1 March 2024 11:22:31 by Jens Götze
Updated 30 April 2024 17:22:10 by Jens Götze