
Install Sector Control correctly


Mounting a Sector Control on a Irrigation Trolley.

What do I have to do?

1. Remove the cannon.
2. Remove the cannon stops.
3. Place the seals between the flanges.
4. Align the sector control so that the blue motor box faces the hose reel.

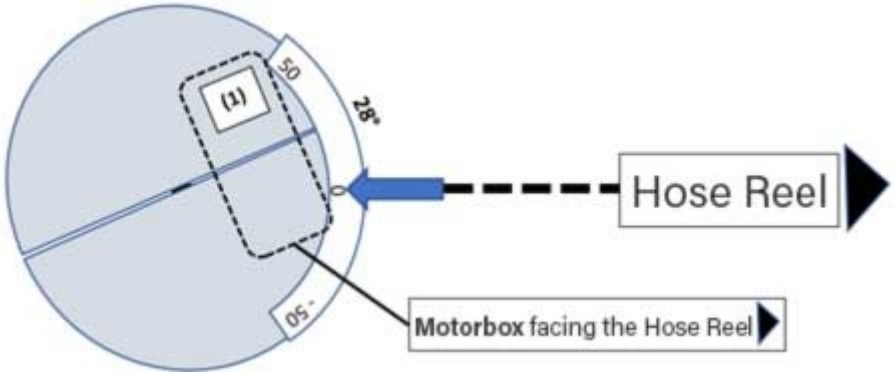

5. Fasten the supplied screws.
6. Mount the gun with the supplied gasket directly above the sector control.
7. Now mount the provided stops which are fitting for your gun.
   Screw the short stop always to the **upper position from TOP**, and the long stop to the **lower position from BOTTOM**.
8. Switch on the sector control on the black motor box. Make sure that the button is pushed in.



Alignment of the Stops

The tip of the triangular markings on the stops must **ALWAYS point towards** the gun lever.

 **Standard Setup**	 **Reverse Setup**

Revision #7
Created 4 March 2024 12:08:07 by Jens Götze
Updated 30 April 2024 17:17:35 by Jens Götze